


INSTALLATION INSTRUCTIONS

For 4WLS021 and 4WLS421

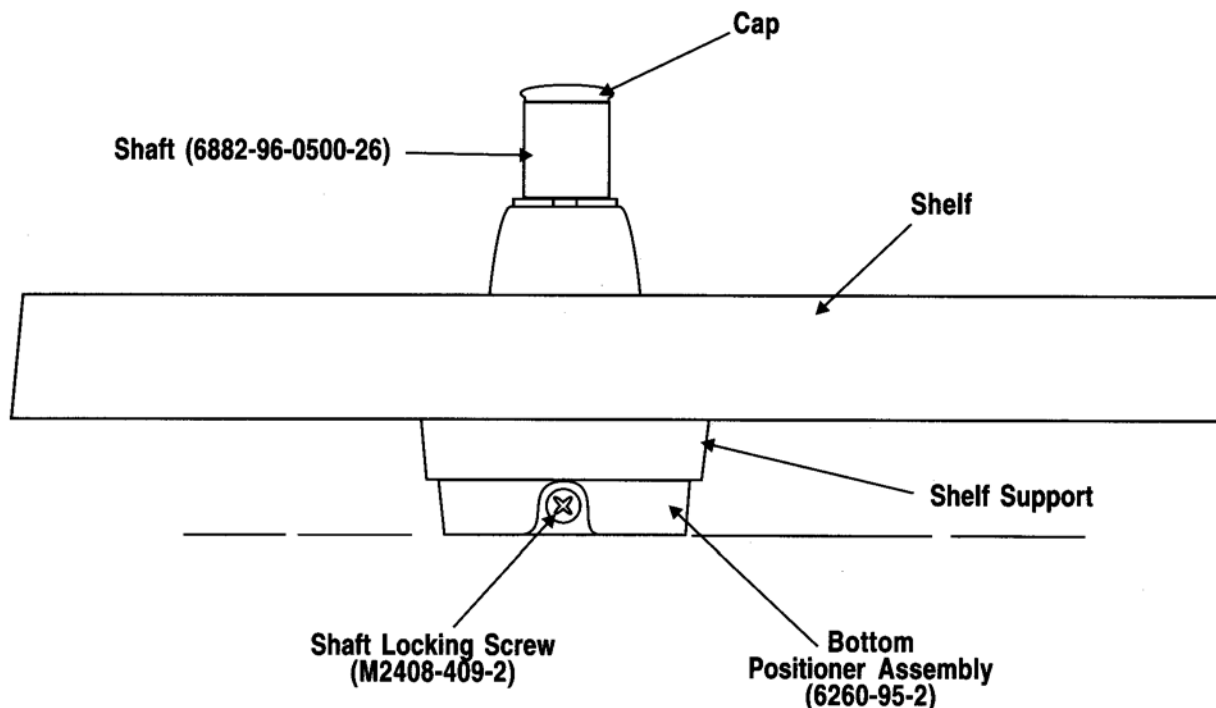

1. Insert shelf support in tray from bottom with keyway to rear of tray and position top shelf hub on top of tray with keyway to rear of tray. Install three (3) 3/4" x #8 (M1812-251-2) self tapping pan head screws through top hub into shelf support and tighten.
2. Locate the bottom positioner assembly on the cabinet floor so that the shelf will have at least 3/8" side clearance all around, and the position and location of the positioner base will determine the positioning of the shelf on pantry and kidney trays.
3. Pilot drill (1/8" diameter) holes and fasten the positioner assembly with four (4) 3/4" x 8 oval head wood screws (F1208-13-2).

Insert the shaft into the positioner assembly and tighten the locking screw. Place the shelf into the shaft.



2409 Plantside Drive • Jeffersontown, KY 40299
800-626-1126 • FAX 502-491-2215